

## SERVICE INSTRUCTIONS FOR VORTOX AIR TECHNOLOGY, INC. PRECLEANERS




The Vortox Air Technology, Inc. Precleaner is a highly efficient dry centrifugal type air cleaner, designed to be attached to the inlet of the oil bath air cleaner. It removes the greater portion of dust from the intake air, thus reducing the dust load on the oil bath air cleaner and greatly extending the periods of between servicing. Constructed entirely of metal and having no gaskets or air seals to be broken when servicing, the Vortox Air Technology, Inc. Precleaner always provides maximum dust removal efficiency. To service, remove the head, empty dust cap, and replace.

F-3037 10-29-13 **1 of 2** 



## SERVICE INSTRUCTIONS

Whenever the engine or unit is inspected, remove the head by twisting to disengage the latches. Empty the dust from the cup and reassemble. Make certain this operation is done frequently enough to prevent the cup from becoming more than three-quarters full of dust.

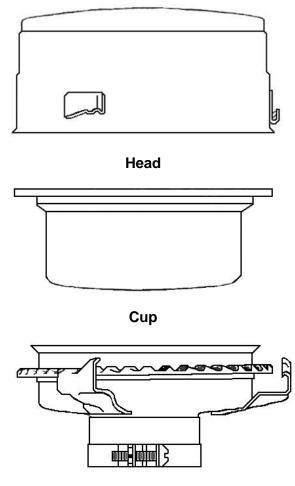

Body

Servicing of the Precleaner does not eliminate the necessity of giving proper attention to the oil bath air cleaner at reasonable intervals, since the use of a Precleaner merely reduces the dust load which the oil bath air cleaner must handle.