



VORTOX AIR TECHNOLOGY, INC.

Engineering • Design • Manufacturer

## **SERVICE INSTRUCTIONS FOR VORTOX AIR TECHNOLOGY, INC. CENTRIFAIR® DRY AIR CLEANERS**

### **SERVICE INSTRUCTIONS FOR DRY AIR CLEANER**

Service the air cleaner when the restriction indicator reaches 20 inches of water or the limit specification indicated by the Engine Service Manual. Remove the dust cap and filter. Service the dust cap (as instructed below). Inspect the filter and replace if necessary. Replace any damaged gaskets at once.

### **SERVICE INSTRUCTIONS FOR DUST CAP**

Empty the dust cap daily or as soon as the space under the disc becomes half filled with debris. A regular service interval may be established based on the operating conditions in each application. Align the side grooves in the disc and cup when reassembling after servicing. Replace any damaged gaskets at once.

### **SERVICE INSTRUCTIONS FOR FILTER ELEMENTS**

The filter elements should be serviced when the airflow restriction reading (in inches of water vacuum) reaches the engine manufacturer's recommended maximum. It is **NOT** recommended to clean the filter elements with compressed air or by washing. When reassembling your Vortox Air cleaner, please refer to the filter element label for possible torqueing range.